

**Capacitor bank LED**

To indicate operating steps

**nth Harmonic LED**

1st, 3rd, 5th, 7th, 9th & 11th

**Inductive LED**

Indicate inductive power

Flashing LED indicates +C

**Capacitive LED**

Indicate capacitive power

Flashing LED indicates -C

**Access to Parameter Section**

Operate only in default info mode

(cos φ LED lit)


Press the 'Select' button

**Auto LED**

Automatic Operation

**Manual LED**

Manual Operation

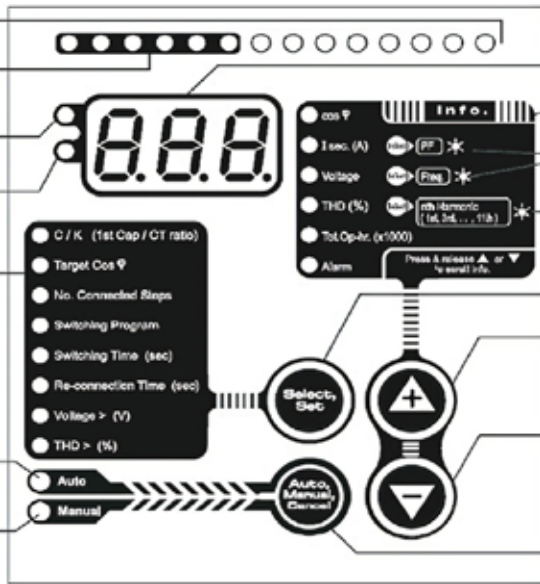

**3 Digit LED Display**

Display value / info

**Info Section**

Using Up or Down button to scroll info only

To view Power Factor value, press 'Down' button until I-sec (A), then press 'Select' button. Do the same to view frequency.

To view individual nth harmonic amplitude, please refer to pg. 16

**Select / Set Button**

Operate Parameter settings section

View additional info in info section /

Store new value

**Up Button**

Set value increment / Scroll info.

(Manual mode)

Hold 2 sec. +C (1 step)

Hold 5 sec. +C... (all step)

**Down Button**

Set value decrement / Scroll info.

(Manual mode)

Hold 2 sec. -C (1 step)

Hold 5 sec. -C... (all step)

**Auto / Manual / Cancel Button**

Activate Auto / Manual mode when

hold for 2 seconds,

undo changes,

return to default mode

اتصالات الکتریکی

